

Installation Manual - Hardware





 


▮ AMG750 SERIES INCLUDED ACCESSORIES



AMG750 Router






Due to the close proximity of each antenna performance will be limited. It is recommended that external antennas are used for maximum performance.

DIN Bracket


/ DIN RAIL MOUNT INSTALLATION



▮ DEVICE RESET PROCEDURE

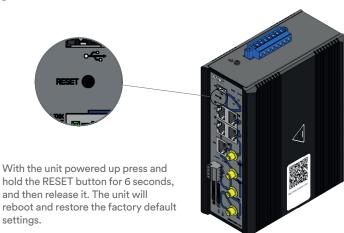


LED INDICATORS

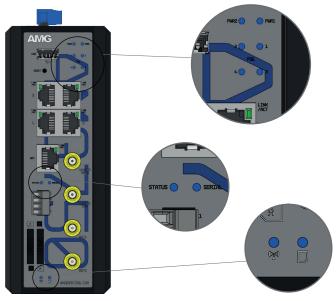


LED	Colour	Description
PWR 1 / 2	Blue	DC input present on power 1 / 2
STATUS	Blue	Device is running normally
SERIAL	Blue	Serial data in operation
POE 1-4	Blue	PoE is being delivered on the port
RJ45 LINK/ACT	Green	Ethernet link present (flashes with data traffic activity)
((<u>o</u>))	Blue	WiFi is enabled
D	Blue	Fast Flash = Cellular Signal 0~30% Slow Flash = Cellular Signal 31~60% Solid = Cellular Signal 61~100%


/ POWER

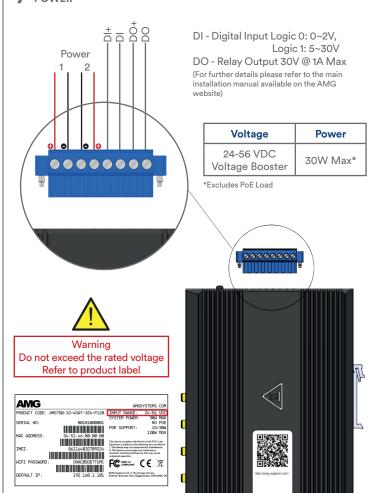

ANTENNA CONNECTIONS

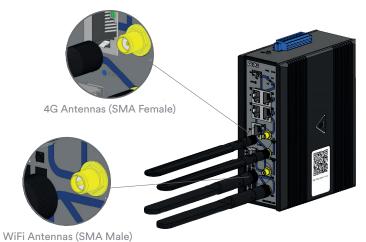

SERIAL DATA CONNECTIONS

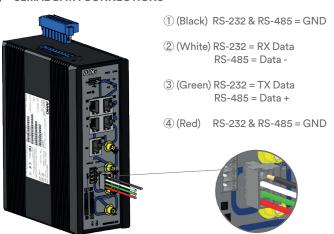

INSTALLING THE CELLULAR SIM CARD(S)



If using only 1 SIM card always install it into slot A

/ CONNECTING TO THE WEB GUI



Default IP Address:	192.168.1.101
Username:	Admin
Password:	Admin
WiFi SSID:	Staff
WiFi Password:	See Label On Unit

To access the full software user guide for this product please visit the product page using the QR code opposite or the direct link below:

