


BOOSTER 2G[☆]

installation sheet


15-09-2015 | v1.1

Step 1*

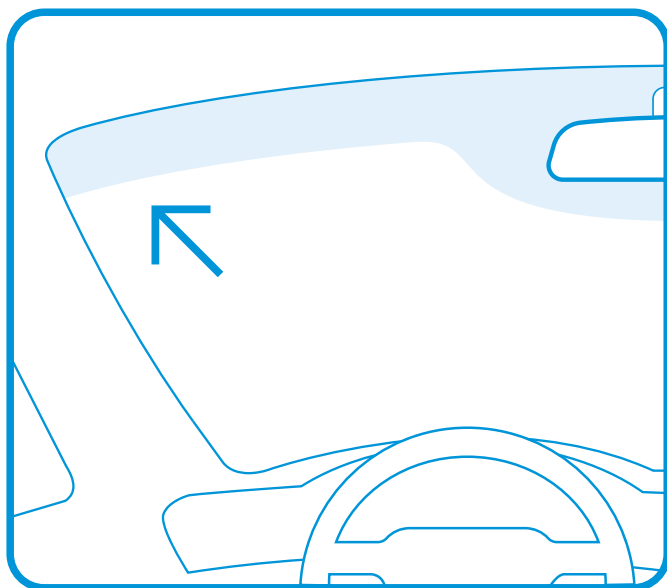


Determine the position of the Booster 2G on the inside of the vehicle's window*.

Step 2

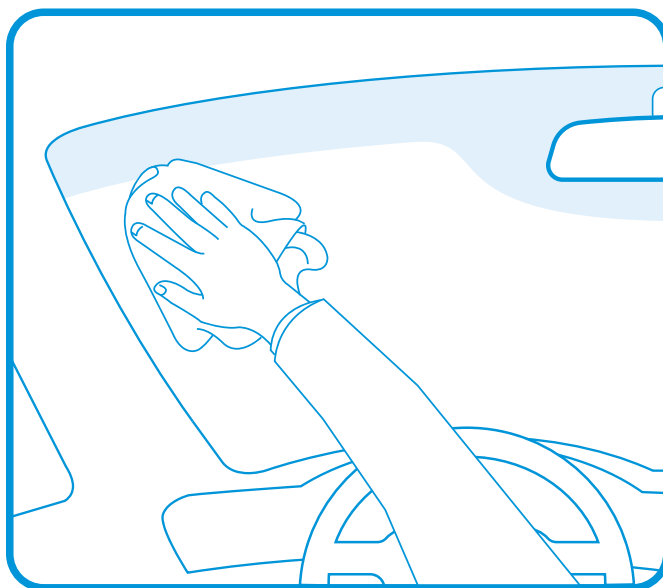


Clean the inside surface of the window. Make sure the window is completely oil and dirt free.

Step 3

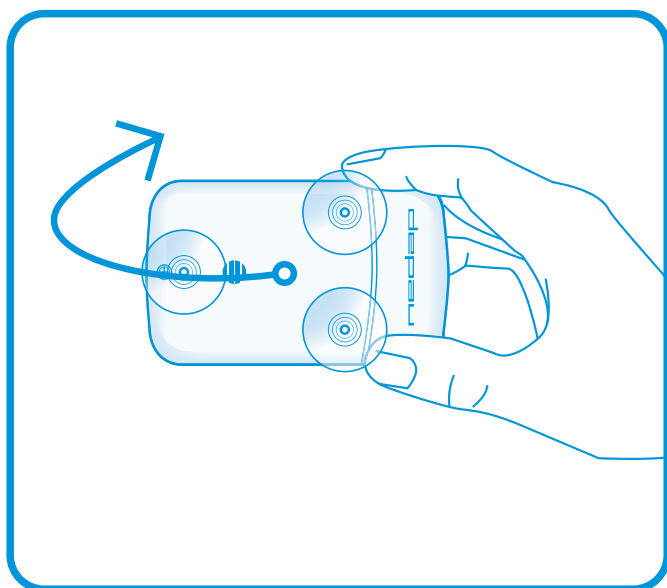


The suction cup is the Booster 2G's front side (active part). This part should face the outside of the window.

Step 4

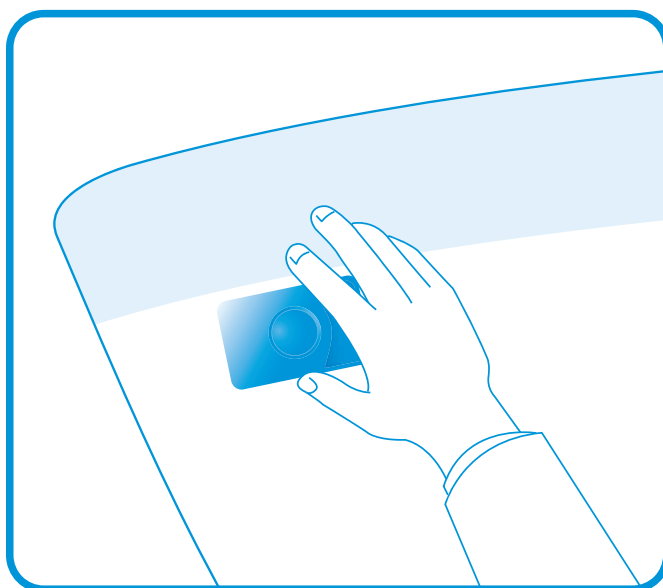


Firmly press the Booster 2G against the inside of the window in line of sight of the TRANSIT reader.

Step 5

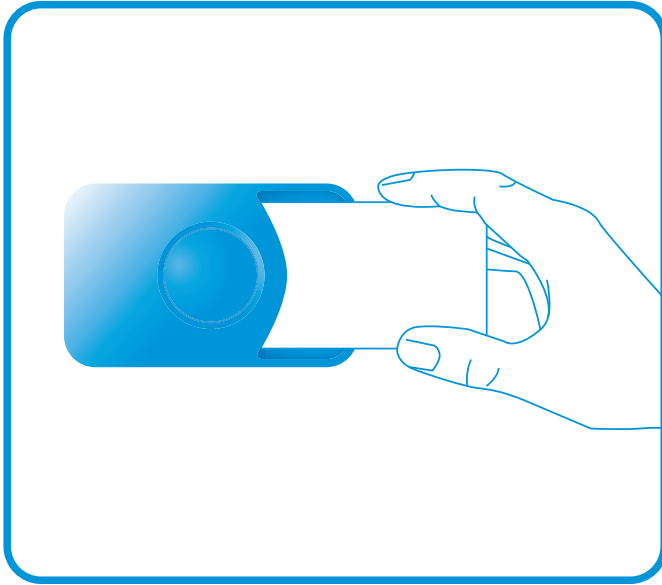


Upon entering the vehicle, insert the access credential into the Booster 2G.

Step 6

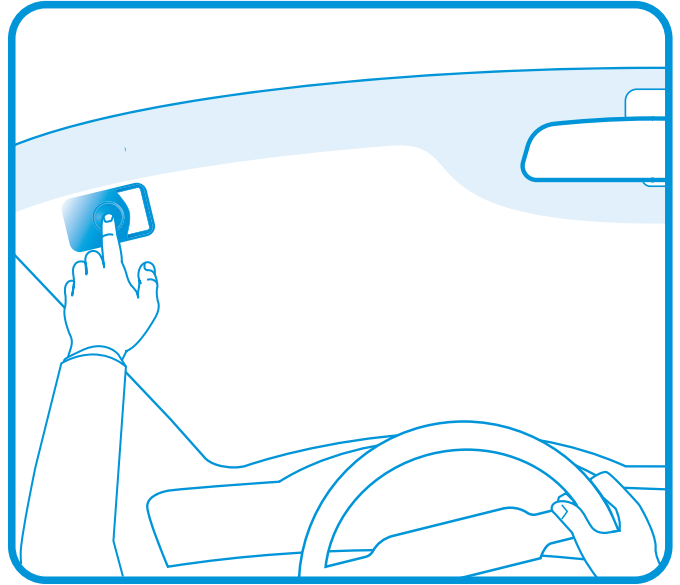


Active the Booster by pressing the switch (depending on the Booster mode) when driver activation is required.

Step 7

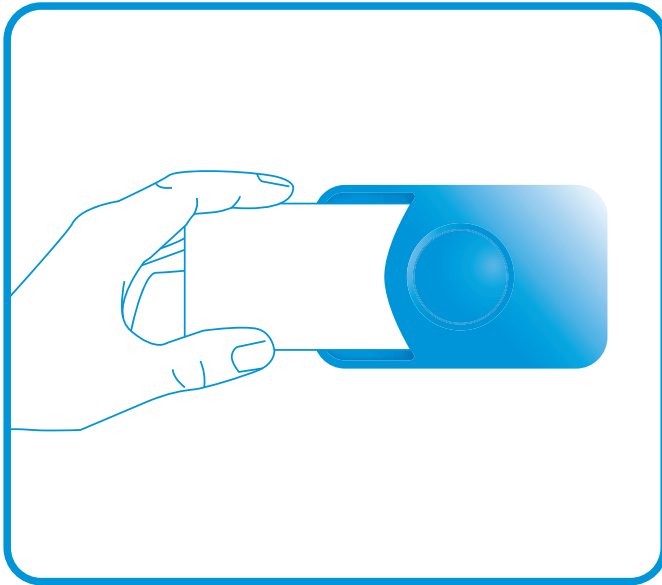

Once the vehicle has been parked, ensure to remove the access credential from the Booster 2G.

Step 8*

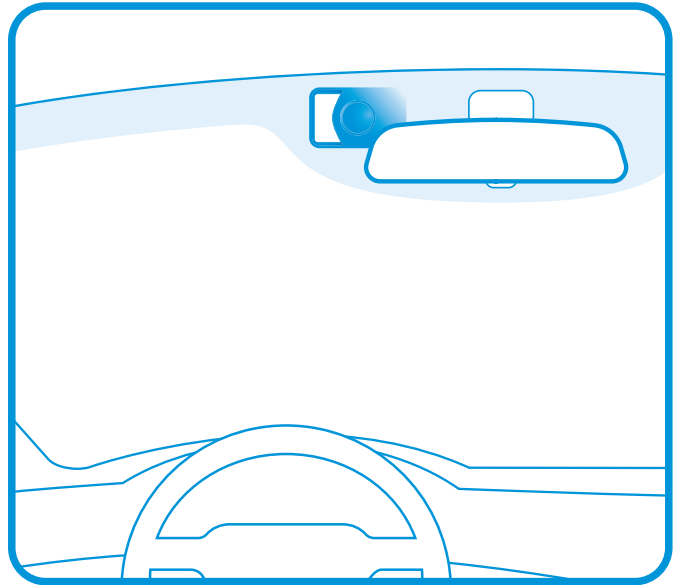

Correctly mounted booster in case of metalized windshield*.

*Important note

We advise to mount the Booster on the same side as where the long-range reader has been positioned. In case of a metalized windshield, we advise to place the Booster 2G 2 inches from window top / 0-4 inches from the rear view mirror to ensure the performance of the Booster 2G. Usually, vehicles with metalized windshields (also called solar control coatings) have a non-metalized communication window behind and on either side of the rear view mirror of the vehicle. For more specific information, please contact your vehicle owner manual or contact your dealership. Compliance with these instructions is important and strongly recommended in order to ensure proper operation of the system.