

# TRANSIT ULTIMATE<sup>★</sup>

## installation guide

2015-12-17 | v4.6 | 5481104



## CONTENT

|                                      |    |
|--------------------------------------|----|
| 1. INTRODUCTION                      | 3  |
| 1.1 PRODUCT DESCRIPTION              | 3  |
| 1.2 ULTIMATE FEATURES                | 4  |
| 2. INSTALLATION                      | 5  |
| 2.1 SAFETY PRECAUTIONS               | 5  |
| 2.2 INSTALLATION GUIDELINES          | 5  |
| 2.3 MOUNTING INSTRUCTIONS            | 6  |
| 2.3.1 TRANSIT ULTIMATE DIMENSIONS    | 6  |
| 2.3.2 WALL MOUNTING                  | 7  |
| 2.3.3 POLE MOUNTING                  | 8  |
| 2.4 INSTALLING THE SECURITY KEY PACK | 9  |
| 2.5 INSTALLING A COMMUNICATION BOARD | 10 |
| 3. CONNECTIONS                       | 11 |
| 3.1 OVERVIEW                         | 11 |
| 3.2 POWER SUPPLY                     | 12 |
| 3.2.1 AC MAINS                       | 12 |
| 3.2.2 DC SUPPLY INPUT                | 12 |
| 3.2.3 DC OUTPUT                      | 13 |
| 3.3 COMMUNICATION                    | 14 |
| 3.3.1 USB                            | 14 |
| 3.3.2 WIEGAND / MAGSTRIPE / BARCODE  | 15 |
| 3.3.3 RS232 COMMUNICATION            | 16 |
| 3.3.4 RS422 COMMUNICATION            | 16 |
| 3.4 DIGITAL I/O                      | 17 |
| 3.4.1 RELAY OUTPUT                   | 17 |
| 3.4.2 READ DISABLE INPUT             | 18 |
| 3.4.3 TAMPER SWITCH                  | 19 |
| 3.4.4 GENERAL PURPOSE INPUTS         | 20 |
| 3.5 SPECIAL CONNECTIONS              | 21 |
| 3.5.1 PROXIMITY ANTENNA              | 21 |
| 3.5.2 NEDAP ANTENNA MODULATION       | 22 |
| 4. CONFIGURATION                     | 23 |
| 4.1 FIRMWARE OPTIONS                 | 23 |
| 4.2 SERIAL COMMUNICATION SELECT      | 23 |
| 4.3 ULTIMATE-MODE                    | 24 |
| 4.4 RANGE BEEPER                     | 24 |
| 4.5 FREQUENCY SELECTION              | 25 |
| 4.6 READ RANGE CONTROL               | 26 |
| 5. LED INDICATIONS                   | 27 |
| 5.1 MAIN BOARD INDICATIONS           | 27 |
| 5.2 TAB BOARD INDICATIONS            | 28 |
| A TECHNICAL SPECIFICATIONS           | 29 |
| B FREQUENCY CHANNELS                 | 30 |
| C NEDAP PART NUMBERS                 | 31 |
| D FCC / IC STATEMENT                 | 32 |
| E DISCLAIMER                         | 33 |
| F DOCUMENT REVISION                  | 34 |

## 1. INTRODUCTION

### 1.1 PRODUCT DESCRIPTION

The TRANSIT Ultimate is a long-range reader, based on semi active RFID technology, which enables automatic vehicle identification at distances of up to 10 meters (33 ft) and speeds of up to 200 km/h (125 mph).

#### Key features

- Robust industrial design
- Read range up to 10 meters [33 ft]
- Object speed up to 200 km/h [125 mph]
- Adjustable read range
- Selectable frequency channels
- Variety of integrated communication interfaces
- 3 color LED indication
- Tag authentication based on AES encryption
- Bi-directional tag communication
- Backwards-compatible with previous TRANSIT readers.

#### Frequency channels

The TRANSIT Ultimate operates on a factory-set frequency channel. Different frequency channels allow multiple readers to operate in close vicinity of each other without interference.

#### Read range adjustment

The reader efficiently resolves typical multi-lane, entry and exit reader challenges. The read range of the TRANSIT Ultimate can be adjusted to offer secure and reliable identification in demanding applications.

#### Housing & mounting

The weatherproof TRANSIT Ultimate reader features an IP66 certified housing. The reader operates reliable under harsh environmental conditions and is able to withstand exposure to rain, snow and ice. Wall mounting equipment is included.

#### Interfaces & protocols

The TRANSIT Ultimate is designed for seamless and flexible integration into existing management systems in the industry, such as security, parking, and logistics. Several communication interfaces to the host system are available such as RS232, RS422, RS485, Profibus-DP and TCP/IP. Also open industry-standards protocols such as Wiegand, Magstripe and Barcode are supported. Customer specific protocols can be implemented on request.

### 1.2 ULTIMATE FEATURES

#### Encrypted tag authentication

The TRANSIT Ultimate enables encrypted tag authentication for the Ultimate tags: Smartcard Booster Ultimate, LEGIC Booster Ultimate and Window Tag Ultimate. The authentication uses encryption based upon AES 128-bit keys. Key diversification is used to ensure that a unique encryption key is used for every tag.

#### Data storage

Thanks to the bi-directional tag communication feature and in combination with Smartcard-Booster Ultimate it will be possible to write information on the drivers' access control card when the car enters or leaves a perimeter. This will enable write actions like changing credits, offline access rights or other information changes dynamically upon perimeter access.

#### Implementation

The Ultimate-mode features are implemented in the TAB board. The TAB-board performs the authentication or other Ultimate function using the bi-directional tag communication channel at 433MHz.

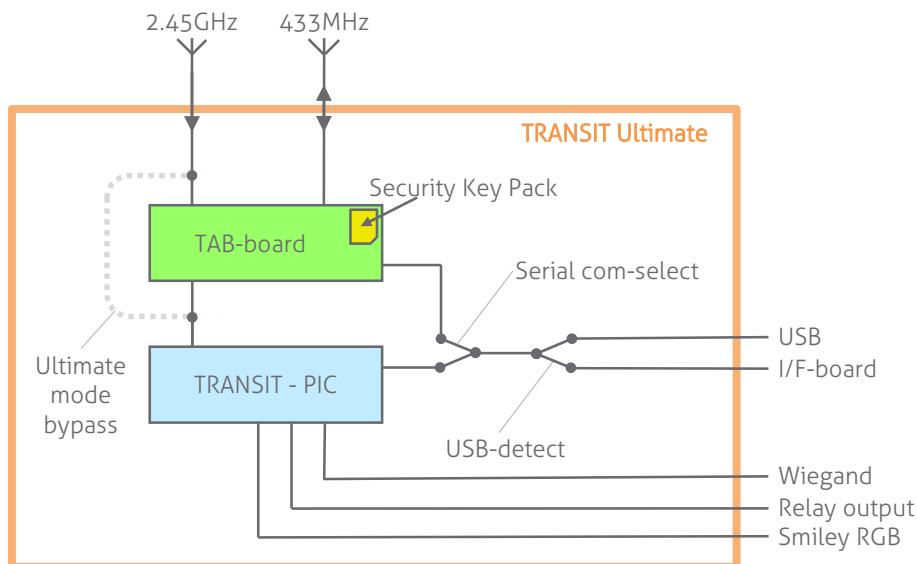


Figure 1: TRANSIT Ultimate block diagram

#### Authentication procedure

The encrypted tag authentication is performed when both antennas (433MHz and 2.45GHz) receive the same id-number. This ensures that the tag to be authenticated is located in the well-defined directional beam in front of the reader.

1. Receive Ultimate tag id-number.
2. Send encrypted challenge to the tag.  
The challenge is generated by the Security Key Pack based upon random numbers encrypted with a diversified AES128 key.
3. Receive, decrypt and verify the encrypted challenge response from the tag.
4. When the authentication is successful, the id-number is transmitted on the communication output(s). Wiegand, USB, etc.

#### Note

The TAB board may be bypassed to make the TRANSIT Ultimate fully compatible with the TRANSIT Standard. See chapter 4.3.

## 2. INSTALLATION

### 2.1 SAFETY PRECAUTIONS


The following safety precautions should be observed during normal use, service and repair:

- The TRANSIT Ultimate shall be connected to safety ground.
- Disconnecting from (mains) power supply before removing any parts.
- The TRANSIT Ultimate shall only be installed and serviced by qualified service personnel.
- To be sure of safety, do not modify or add anything other than mentioned in this manual or indicated by NEDAP N.V.

### 2.2 INSTALLATION GUIDELINES


The TRANSIT Ultimate can be installed in any position. The normally expected read range is up to 10 meters.

Usually the reader is mounted in the horizontal position. In this case the coverage area in the horizontal plane is maximized. The horizontal beam is 80 degrees.

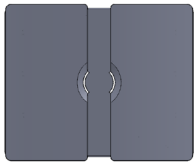

Horizontal mounting: 80 degrees wide read coverage.

In some applications a vertical installation is required to make use of the smaller beam width in the vertical plane. The vertical beam is 40 degrees. This can be very useful in applications with multiple driving lanes to prevent cross readings.

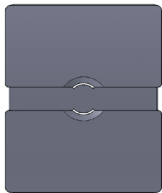

Vertical mounting: 40 degrees narrow read coverage.

The Wall Mounting Set, which make rotation in the vertical and horizontal plane possible, is standard included with every TRANSIT Ultimate.

## 2.3 MOUNTING INSTRUCTIONS

See the following chapters for details about the dimensions of the reader and the mounting brackets and the locations of the mounting positions.

### 2.3.1 TRANSIT ULTIMATE DIMENSIONS

The picture below shows the dimensions of the TRANSIT Ultimate.  
All dimensions are in mm.

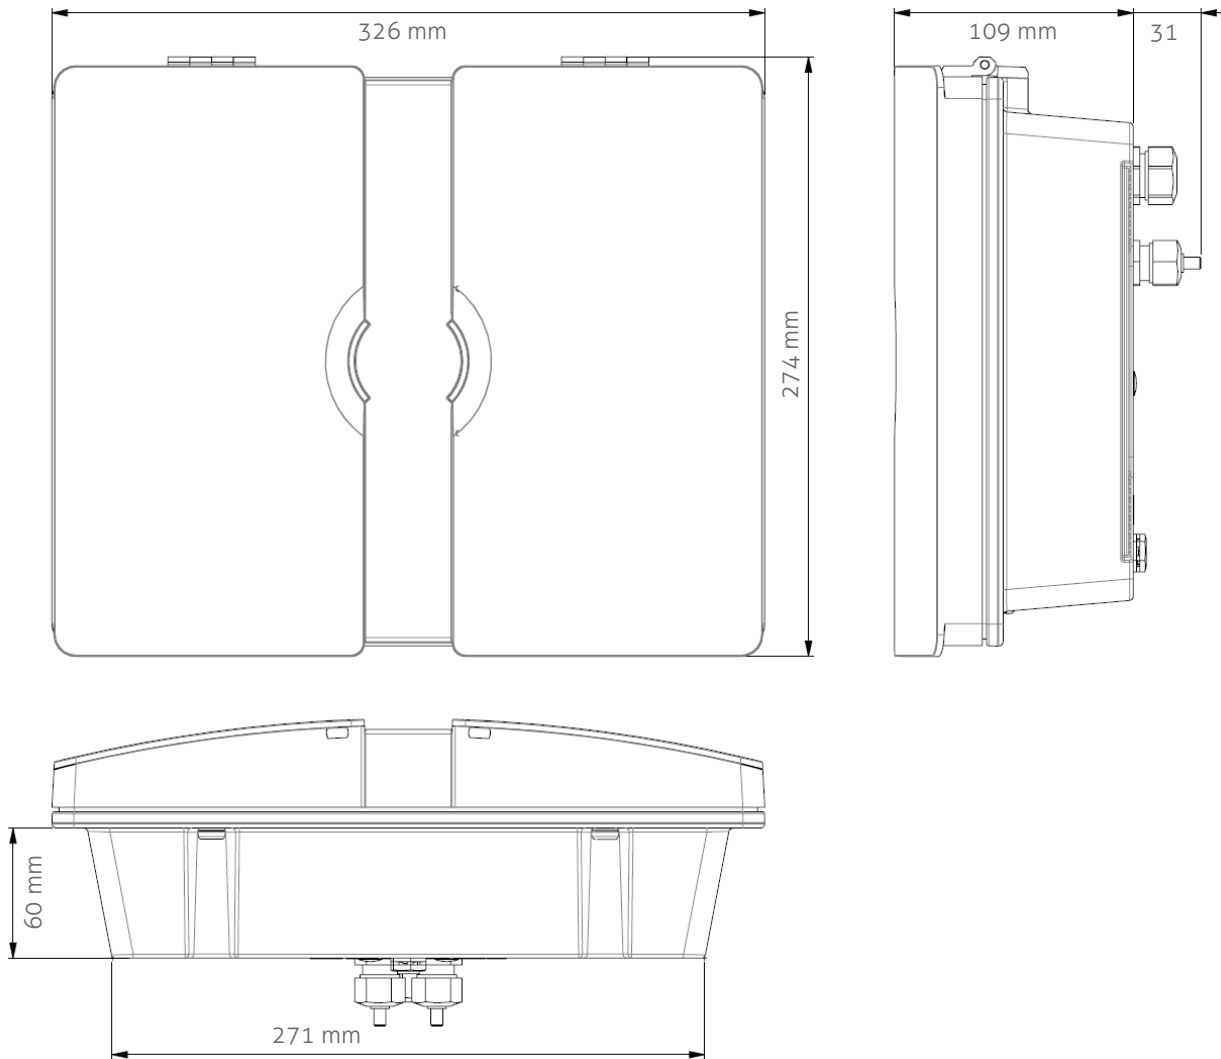


Figure 2: Dimensions TRANSIT Ultimate

2.3.2 WALL MOUNTING

The picture below shows the dimensions of the Wall Mounting Set.

The Wall Mounting Set is included within the delivery of the TRANSIT Ultimate.

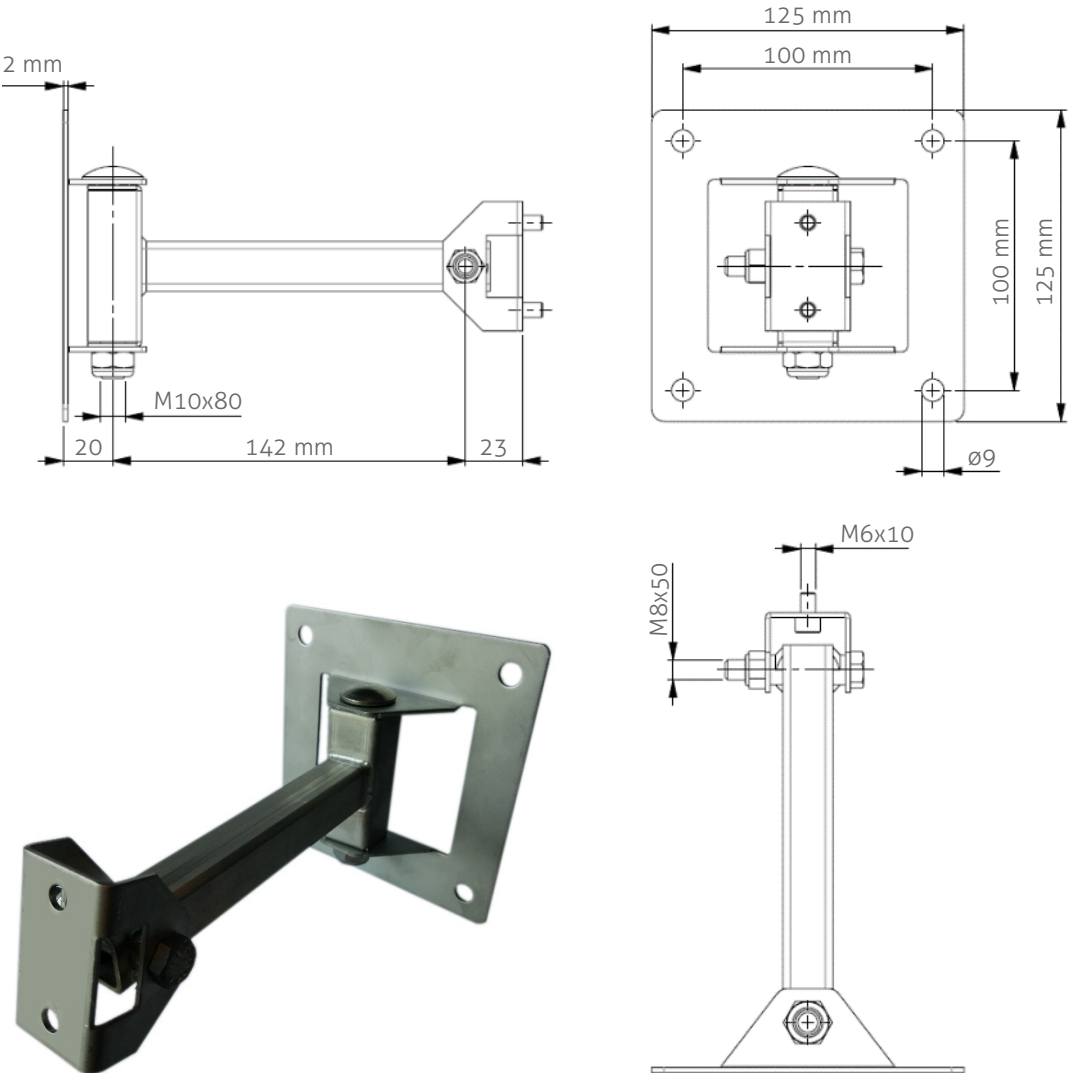


Figure 3: Dimensions Wall Mounting Set

#### 2.3.3 POLE MOUNTING

The Pole Mounting Kit has to be ordered separately (art. no. 5626595).

The TRANSIT Ultimate can be mounted to round poles with maximum diameter of 190 mm and square poles with maximum diameter of 150 mm using the Pole Mounting Kit.

**Note that the Wall Mounting Set will be mounted onto the Pole Mounting Kit.**

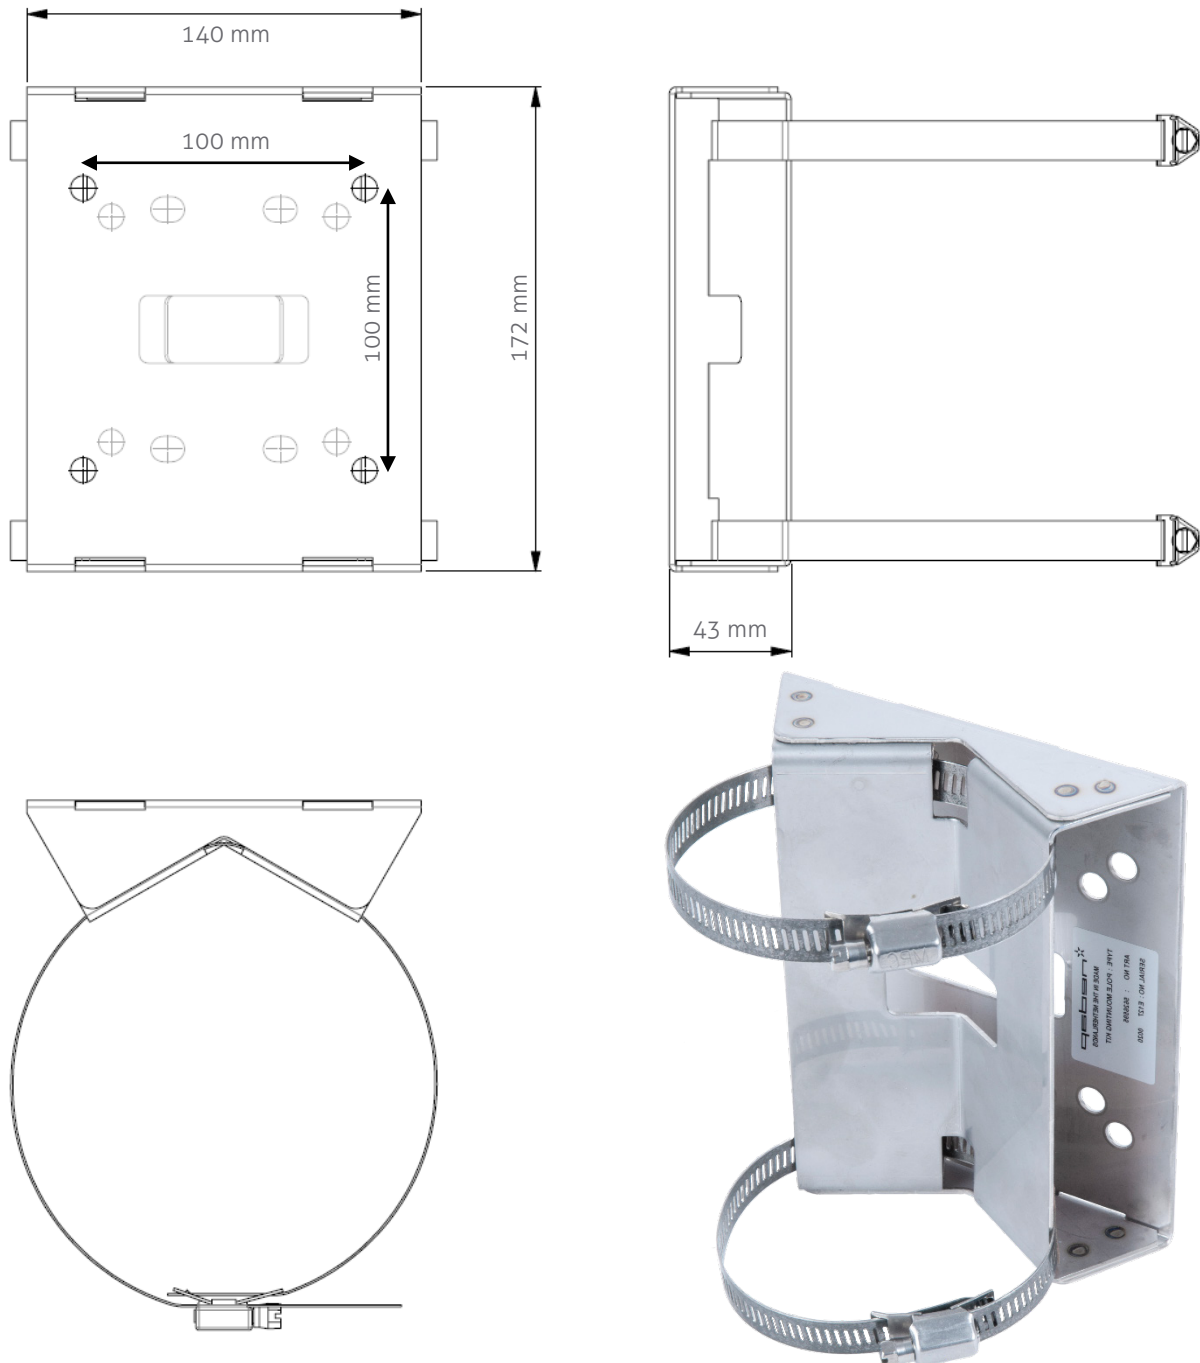


Figure 4: Dimensions Pole Mounting Kit

#### 2.4 INSTALLING THE SECURITY KEY PACK

The optional Security Key Pack (SAM) has to be ordered separately (art. no. 9216537) and is required for the TRANSIT Ultimate to perform the encrypted authentication on the Ultimate tags. Please follow the procedure below to install the Security Key Pack into the TRANSIT Ultimate.

##### Security Key Pack installation procedure

Insert the Security Key Pack (SAM) into the TAB board.

1. Align the notch as indicated in Figure 5 and keep the metal contacts backwards.
2. Push the SAM into the slot until it clicks into place.
3. Set the LOCK-switch to the right to lock the SAM.
4. Enable the Ultimate-mode by settings dip-switch SW2-2 ON. See chapter 4.3.

##### Removal procedure

1. Set the LOCK-switch to the left to release the SAM.
2. Push the SAM to eject it.
3. Disable the Ultimate-mode by setting dip-switch SW2-2 OFF. See chapter 4.3.

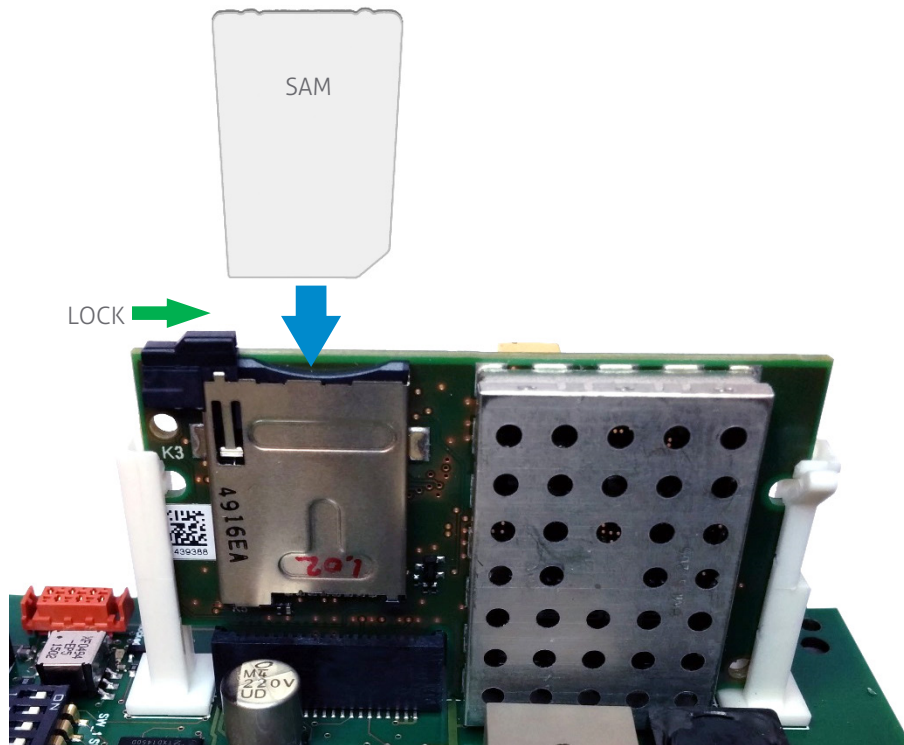


Figure 5: Installing the Security Key Pack (SAM)

## 2.5 INSTALLING A COMMUNICATION BOARD

The TRANSIT Ultimate features an on-board USB port and a Wiegand / Magstripe / Barcode interface. See chapter 3.3 for more details.

Other communication interfaces can modularly be installed in the reader by means of a communication interface board. There are various communication interface boards available for the TRANSIT Ultimate. See appendix C for available boards and their part numbers.

Make sure to follow all safety precautions outlined in chapter 2.1 when installing or replacing a communication board.

### Communication board installation procedure:

1. Open the TRANSIT Ultimate. You can put the cover strut into place to keep the cover open.
2. Disconnect the power supply.
3. Place the communication interface board on the 14-pin header K5 as indicated in the picture below.
4. Make sure that the 4 plastic PCB supports are properly positioned and fixed into the communication board.
5. Read the communication board's installation guide for additional notes like address setting, jumper settings and wiring details.
6. Test if the communication works correctly.
7. Close the cover of the TRANSIT Ultimate.

### 3. CONNECTIONS

#### 3.1 OVERVIEW

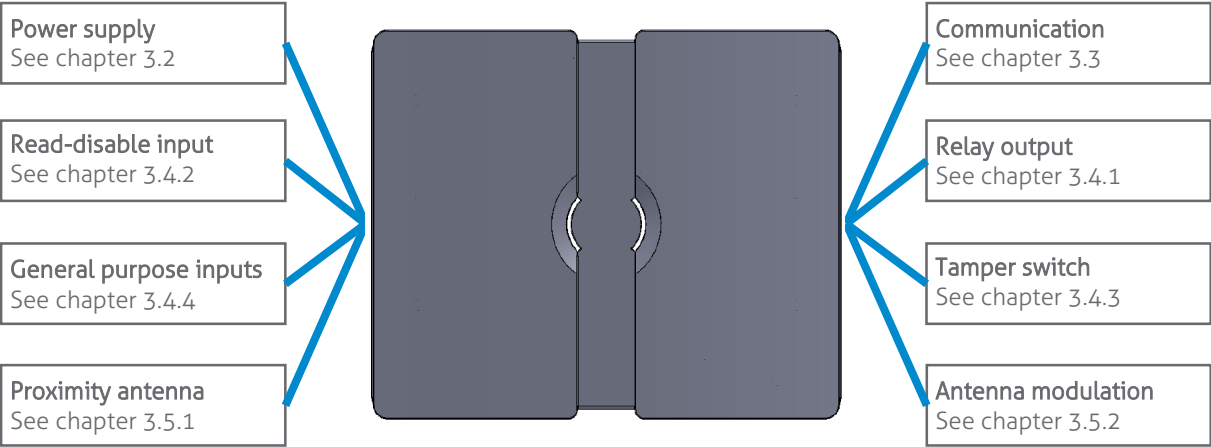


Figure 6: TRANSIT Ultimate connections overview

# TRANSIT ULTIMATE | INSTALLATION GUIDE

## CONNECTIONS

### 3.2 POWER SUPPLY

The TRANSIT Ultimate can be powered by AC mains or by a 24 VDC power supply.

#### 3.2.1 AC MAINS

Connect the Mains load and neutral wires to the connector terminals VAC-L and VAC-N. The earth wire should be connected to the dedicated safety ground connection.

Input voltage: 100 – 240 VAC

Frequency: 60 – 50 Hz.

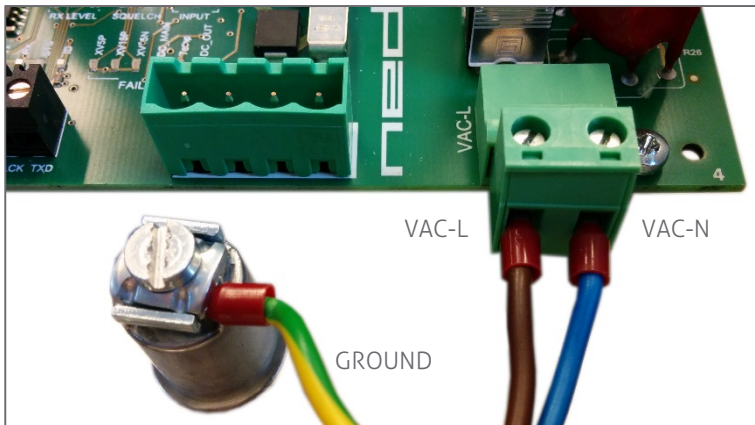


Figure 7: AC mains connections

#### 3.2.2 DC SUPPLY INPUT

Connect the DC power supply to the connector terminals as indicated below. Remove the connector for easy fixing the wires.

Input voltage: 24 VDC  $\pm$  10%

Max. input current: 700 mA @ 24 VDC

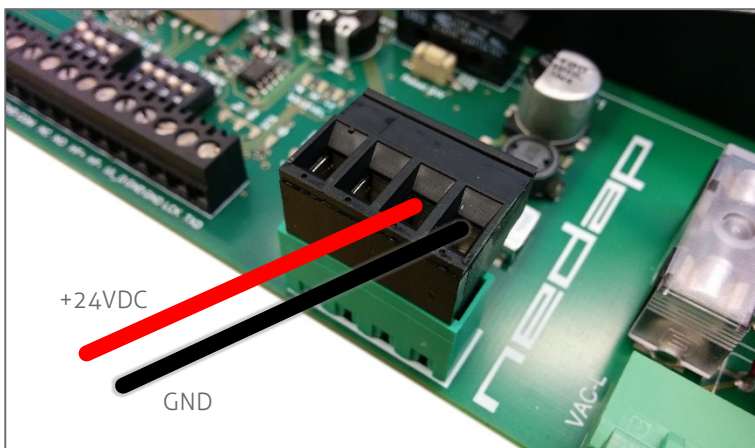
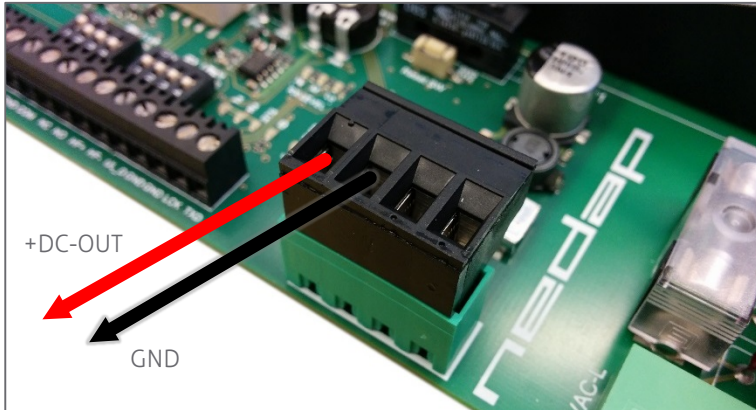


Figure 8: DC input connections

#### 3.2.3 DC OUTPUT

The DC output can be used to supply power to an additional device installed inside or near the TRANSIT Ultimate.



*Figure 9: DC output connections*

#### DC output ratings

Output voltage: 23.4 VDC  $\pm$  10%

Max. output current: 100 mA.

### 3.3 COMMUNICATION

#### 3.3.1 USB

The TRANSIT Ultimate features an USB interface for service and installation purposes. The USB connector (Type B) is accessible behind the cover. While the USB interface is in use, the optional communication interface board is disabled.



*Figure 10: USB connection*

#### USB Virtual Com Port driver installation

Make sure your computer is connected to the internet. The driver usually is installed automatically via Windows update when the USB interface is connected to your PC. Follow the driver installation wizard. If you do not see the Windows update pop-up, you can manually install the driver. To manually install, you need to go to FTDI's website at [www.ftdichip.com/Drivers/VCP.htm](http://www.ftdichip.com/Drivers/VCP.htm) and download the VCP (Virtual Com Port) drivers for your operating system. Drivers for MacOS and Linux are available as well.

3.3.2 WIEGAND / MAGSTRIPE / BARCODE

The synchronous communication interface wiring uses the connections described below. The actual protocol output depends upon the reader firmware. Please refer to the firmware manual for more details.

| Connections | Wiegand        | Magstripe   | Barcode |
|-------------|----------------|-------------|---------|
| O-1         | -              | Card Loaded | -       |
| O-2         | Data-0 (green) | Clock       | -       |
| O-3         | Data-1 (white) | Data        | Data    |
| GND         | Ground (black) | Ground      | Ground  |

The picture below illustrates the Wiegand wiring.

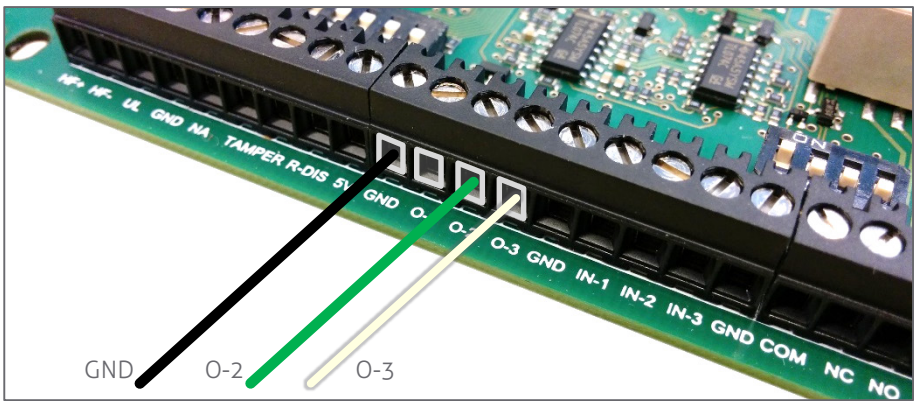


Figure 11: Wiegand wiring

Cable specification:  
4 x 0.25mm<sup>2</sup> shielded  
Maximum cable length: 150 meter.

3.3.3 RS232 COMMUNICATION

| TRANSIT SIDE |      |   | PC SIDE |      |
|--------------|------|---|---------|------|
| DIN 25       | Name |   | DIN 9   | Name |
| 2            | TXD  | → | 2       | RXD  |
| 3            | RXD  | ← | 3       | TXD  |
| 7            | GND  | — | 5       | GND  |

Cable specification:

3 x 0.25mm<sup>2</sup> shielded

Maximum cable length: 30 meter.

3.3.4 RS422 COMMUNICATION

RS422

Jumper in position RS422.

| CM422/485 |   | RS422 HOST |
|-----------|---|------------|
| TX+       | → | RX+        |
| TX-       | → | RX-        |
| RX+       | ← | TX+        |
| RX-       | ← | TX-        |

RS485

Jumper in position RS485.

| CM422/485 |   | RS485 HOST |
|-----------|---|------------|
| TX+       |   | -          |
| TX-       |   | -          |
| RX+       | ↔ | A (-)      |
| RX-       | ↔ | B (+)      |

Cable specification:

2 x 2 x 0.25mm<sup>2</sup> twisted pair shielded

Maximum cable length: 30 meter.

Where necessary a convertor box of brand: Westermo type MA42 can be used.

### 3.4 DIGITAL I/O

#### 3.4.1 RELAY OUTPUT

The relay output is automatically activated upon successful identification / authentication of a transponder. The automatic-relay-activation-mode can be configured using the firmware. Please refer to the firmware manual for more details. Authentication is only performed when Ultimate-mode is enabled. See chapter 4.3 for more details.

 The front cover LED lights-up simultaneously with the relay output.

##### Connections:

|     |                               |
|-----|-------------------------------|
| NO  | Relay contact normally open   |
| NC  | Relay contact normally closed |
| COM | Relay contact common          |

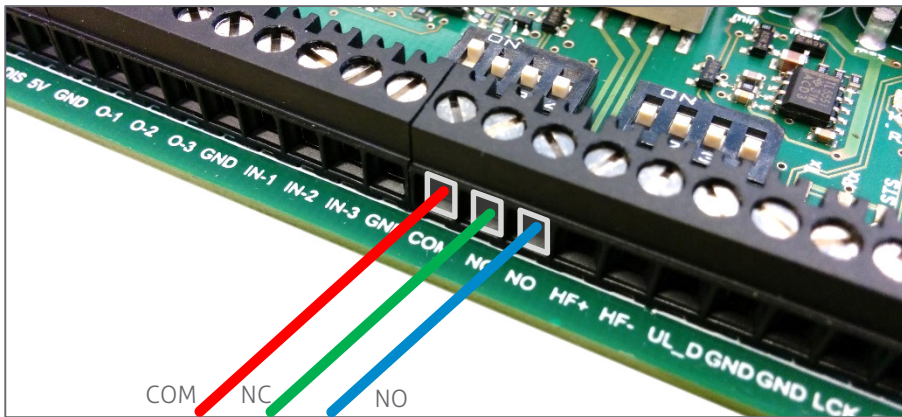


Figure 12: Relay output connections

##### Contact ratings:

|                         |       |
|-------------------------|-------|
| Max. switching current: | 2A    |
| Max. switching voltage: | 24VDC |
| Max. switching power:   | 50W   |

#### 3.4.2 READ DISABLE INPUT

The reading of the TRANSIT Ultimate can be completely disabled with the read disable input (RDIS). This input is commonly used in combination with a sensor (e.g. inductive loop) that detects the presence of a person or vehicle. Use always a relay contact to connect the internal 5V to the RDIS input. When the RDIS input is unused, reading is enabled.

##### Connections:

R-DIS      Read disable input  
5V          Internal 5V source for read disable input.

**Warning:** using an external 5V supply could damage the reader.

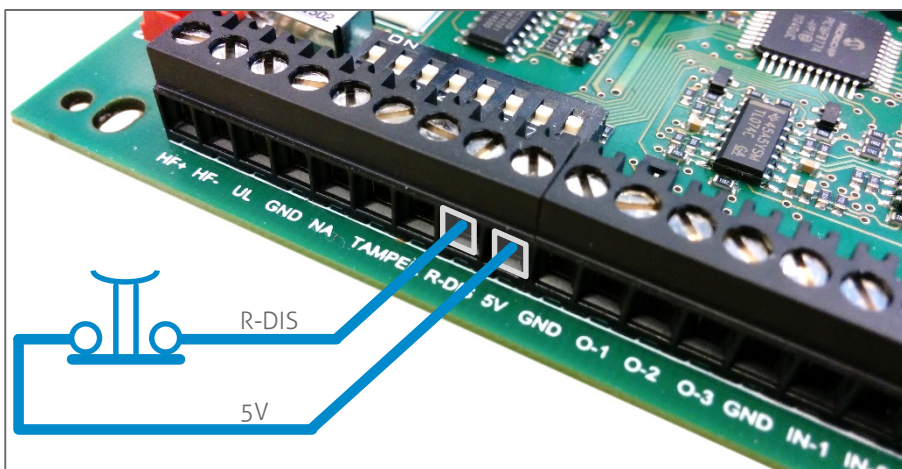


Figure 13: Read disable input

#### 3.4.3 TAMPER SWITCH

The TRANSIT Ultimate features an internal tamper switch that indicates when the cover is opened. This contact may be connected to an external alarm system. The contacts are normally closed when the cover is in place. Tamper switches of multiple TRANSIT Ultimate readers may be connected in series.

##### Connections:

|        |                                          |
|--------|------------------------------------------|
| TAMPER | Tamper switch contacts (normally closed) |
| TAMPER | "                                        |

##### Contact ratings:

|                         |                           |
|-------------------------|---------------------------|
| Max. switching current: | 50 mA (0.5V voltage drop) |
| Max. switching voltage: | 24 VDC                    |

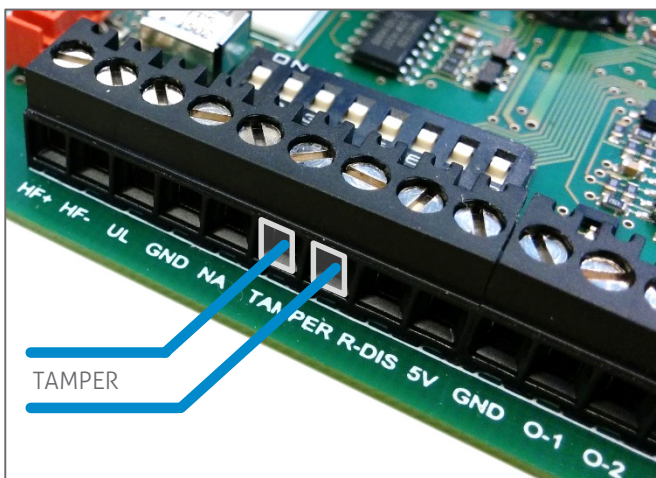


Figure 14: Tamper switch

#### 3.4.4 GENERAL PURPOSE INPUTS

Three general purpose inputs are available on the TRANSIT Ultimate. The inputs are active low. No external voltage should be applied to the inputs. Connect to ground to activate or otherwise leave unconnected.

##### Connections:

|      |                         |
|------|-------------------------|
| IN-1 | General purpose input 1 |
| IN-2 | General purpose input 2 |
| IN-3 | General purpose input 3 |
| GND  | Ground                  |

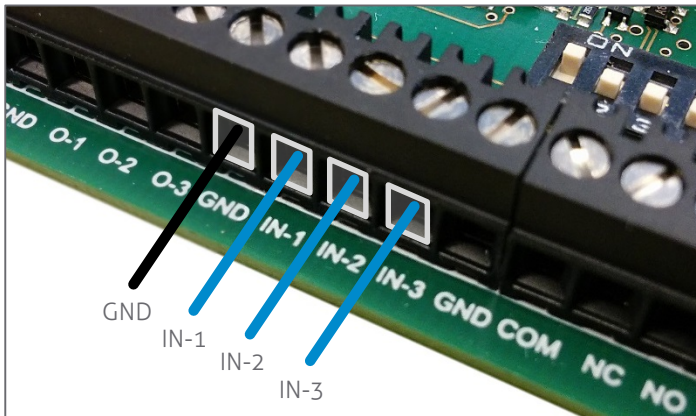


Figure 15: GPIO inputs

### 3.5 SPECIAL CONNECTIONS

#### 3.5.1 PROXIMITY ANTENNA

Optionally a NEDAP proximity antenna can be connected to the TRANSIT Ultimate to enable simultaneously long-range and proximity identification. This is useful when controlling a gate where vehicles as well as pedestrians, cyclists and/or motorists can enter.

The antenna can be either a NEDAP low-frequency proximity antenna or a NEDAP reader with RF output, such as a uPASS Access, ConveXS or another TRANSIT reader.

The green-, and red-LED output connections UL and NA are suitable to directly drive external LEDs with max. 18mA. Note that this is not compatible with the active-low reader inputs on the uPASS Access or ConveXS.

#### Connections:

|     |                              |
|-----|------------------------------|
| HF+ | Antenna+                     |
| HF- | Antenna- (cable shield)      |
| UL  | Green LED output (max. 18mA) |
| GND | Ground for LEDs              |
| NA  | Red LED output (max. 18 mA)  |

#### Cable specification:

4 x 0.25mm<sup>2</sup> shielded

Maximum cable length: 15 meter

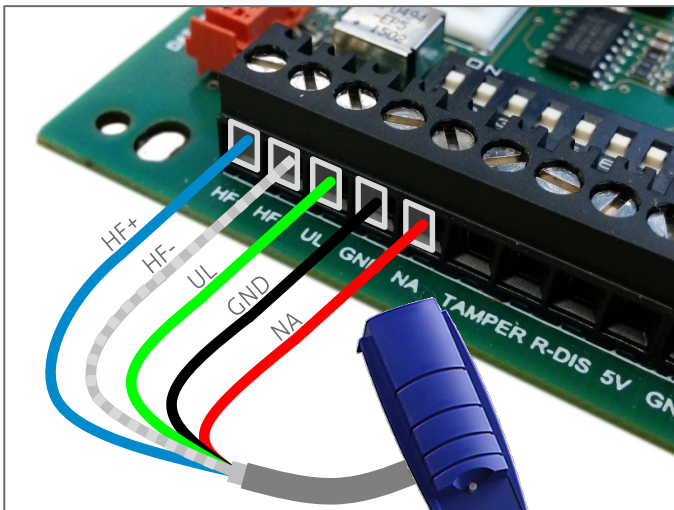


Figure 16: Proximity antenna connections

#### Notes:

- While using the proximity antenna no authentication or other Ultimate functions are performed.
- DIP switch 8 must be in the OFF position to enable this function.

#### 3.5.2 NEDAP ANTENNA MODULATION

The Nedap antenna modulation interface is used to connect the TRANSIT Ultimate to NEDAP AEOS access control hardware such as the AP1001. Instead of a proximity antenna the TRANSIT Ultimate can be connected.

##### Connections:

HF+                Antenna modulation output, connect to ANT  
HF-                Antenna modulation ground (cable shield), connect to ANT GND.

##### Cable specification:

Coax RG58U

Maximum cable length: 100 meter

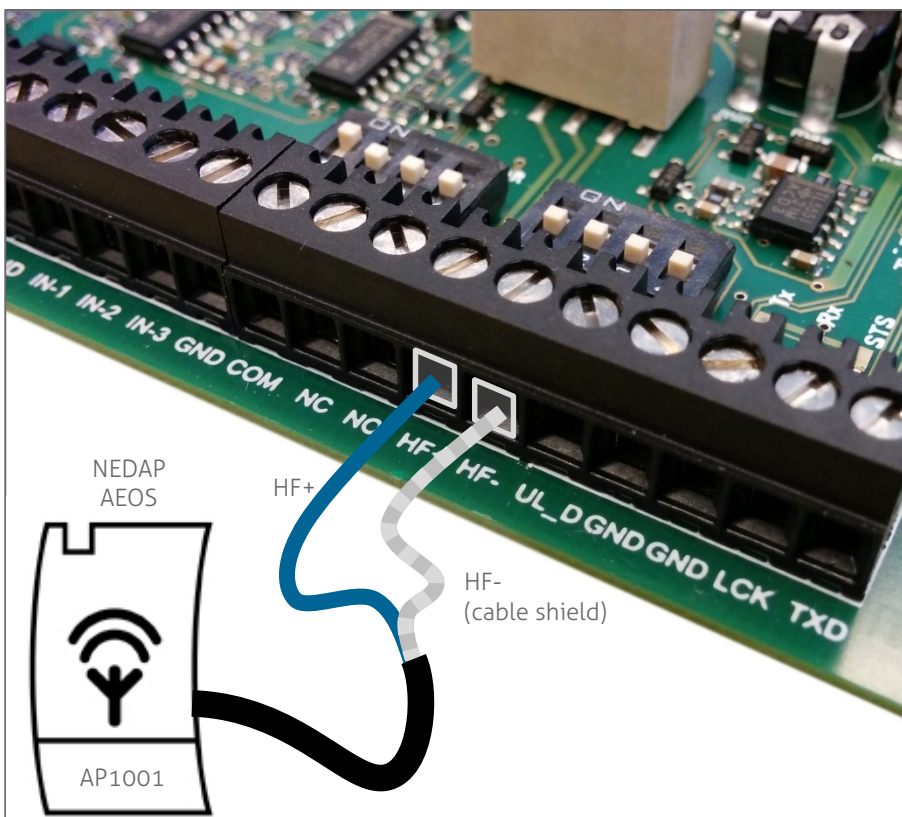


Figure 17: Antenna modulation connections

## 4. CONFIGURATION

### 4.1 FIRMWARE OPTIONS

The TRANSIT Ultimate supports the same firmware versions as the TRANSIT Standard. Different firmware versions are available to support different features and communication protocols. For each firmware version a separate installation guide is available.

Switches SW1-1 to SW1-8 are used to select various options within the actual loaded firmware. They can be used for example to select the serial baud rate, wiegand output options, etc. Refer to the specific firmware manual for details.

The firmware can be changed or updated using the TRANSIT Firmware Upgrade software tool. Make sure that the serial communication select switch is set to TRANSIT (PIC). See chapter 4.2.

#### Note

If the message "Searching for bootloader ..." does not disappear, then press the reset-switch.

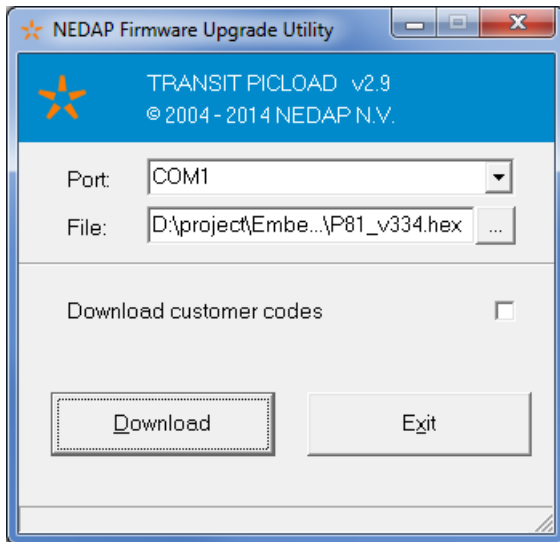


Figure 18: TRANSIT Firmware Upgrade Utility

### 4.2 SERIAL COMMUNICATION SELECT

By default the USB or communication interface board connections will allow communication with the TRANSIT processor (PIC). The communication protocol is determined by the TRANSIT firmware. See also chapter 4.1 above.

The USB or communication interface board connections can also be used to communicate with the processor located on the TAB board. This is for test purposes and will not further be explained in this manual.



 
While the USB cable is connected, the communication interface board is disabled.

#### 4.3 ULTIMATE-MODE


The TRANSIT Ultimate can operate in the ULTIMATE-mode or in the NORMAL-mode.

In the NORMAL-mode the TAB board is bypassed. The reader is compatible with the TRANSIT Standard. In this mode the TRANSIT Ultimate can read original tags, such as Compact-Tag, Window-Button, Heavy-Duty-Tag and Boosters. Also the Ultimate-tags will work, but no authentication or other Ultimate functions are performed.

The ULTIMATE-mode only works in combination with Ultimate-tags.




ULTIMATE-mode

 


NORMAL-mode (TAB bypass)

#### 4.4 RANGE BEEPER

 Enable or disable the internal range beeper. The beeper indicates transponder identification. The signal strength of the identified transponder determines the beeping frequency. When the transponder is near to the reader the range beeper will beep fast.



Range beeper ON

 

Range beeper OFF

## 4.5 FREQUENCY SELECTION

The TRANSIT Ultimate reader operates in the 2.45GHz ISM frequency band.

When two or more readers are within a range of 15 meters (50 feet), these readers should be set on a different operating frequency.

It may also be required to select a different frequency to avoid disturbance between the TRANSIT Ultimate and other 2.45GHz equipment, such as Wi-Fi access points. Please also read chapter **Error! Reference source not found.** when experiencing interference.

Select a frequency channel using the dip-switches located on the transceiver board in the front cover of the reader. Refer to appendix B.

Note that the TAB board uses 2 channels in the 433 MHz band, which cannot be changed.

## 4.6 READ RANGE CONTROL

The read range of the TRANSIT Ultimate can be controlled with the embedded squelch function. The squelch references the received signal strength against the squelch level setting. When the received signal strength is below the squelch level no identification is possible. The received signal strength becomes higher when the transponder comes closer to the reader. When the received signal strength exceeds the squelch level the transponder will be identified.

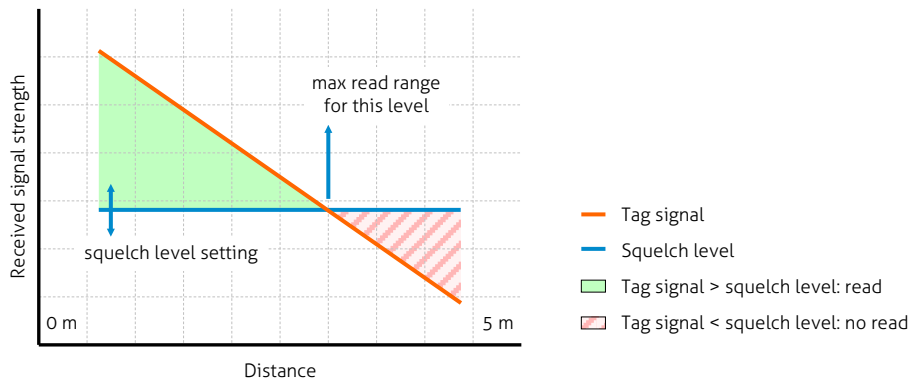


Figure 19: Squelch principle

Adjustment of the read range is done by enabling the squelch and setting the squelch level with its potentiometer. To achieve the maximum read range, disable the squelch function completely with the enable/disable squelch switch. Two LEDs indicate the status of the squelch. When the squelch is enabled LED SQ-ENA will be on. LED SQ-ACT is on when the transponder signal is below the squelch level (red area in Figure 19). In chapter 5 all LED indicators are described.



-  SQ-Level potentiometer completely clockwise:  
Maximum read range.
-  SQ-Level potentiometer completely counter-clockwise:  
Minimum read range.

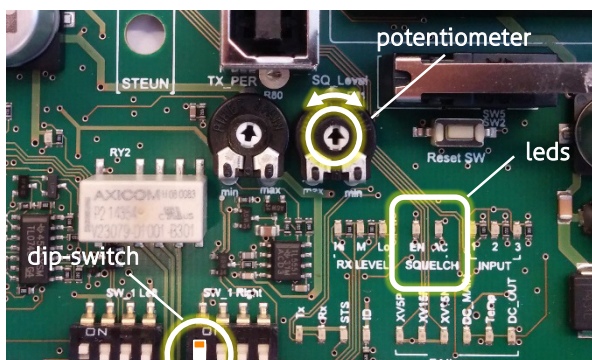


Figure 20: Squelch controls

## 5. LED INDICATIONS

### 5.1 MAIN BOARD INDICATIONS

A number of LEDs on the main board of the TRANSIT Ultimate indicate the status of the reader. The list below describes the function of each LED.

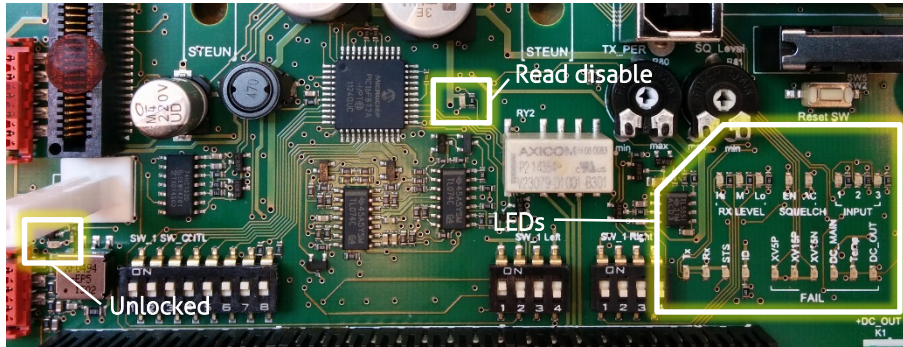


Figure 21: LED indications main board

| Led            | Description                                                                                                                                                                                                                 |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ●●● RX_LEVEL   | LED bar indicating the received microwave tag signal strength. This LED bar may also indicate the presence of radio interference. In case of interference, try switching to a different frequency. See chapter 4.5.         |
| ● SQ-EN        | Squelch enabled. See chapter 4.6.                                                                                                                                                                                           |
| ● SQ-ACT       | Squelch active. See chapter 4.6.                                                                                                                                                                                            |
| ● INPUT-1      | Input 1 status. On when contact is closed. See chapter 3.4.4.                                                                                                                                                               |
| ● INPUT-2      | Input 2 status. On when contact is closed.                                                                                                                                                                                  |
| ● INPUT-3      | Input 3 status. On when contact is closed.                                                                                                                                                                                  |
| ● Tx           | Transmit serial data (USB, I/F-board). See chapter 4.2.                                                                                                                                                                     |
| ● Rx           | Receive serial data (USB, I/F-board).                                                                                                                                                                                       |
| ● STS-LED      | TRANSIT firmware status LED (PIC)<br>Slow blinking: Heartbeat (0.8s on / 0.8s off)<br>Fast blinking: Boot loader active. Indicated after restart.<br>Twice blinking: Configuration menu active.<br>Off: Abnormal situation. |
| ● ID-LED       | TRANSIT identification. Blinks fast upon valid tag.<br>When no identification check dip-switches and customer-code.                                                                                                         |
| ● FAIL-XV5P    | Power supply failure +5V.                                                                                                                                                                                                   |
| ● FAIL-XV15P   | Power supply failure +15V.                                                                                                                                                                                                  |
| ● FAIL-XV15N   | Power supply failure -15V.                                                                                                                                                                                                  |
| ● FAIL-DC_MAIN | Power supply failure DC-MAIN.                                                                                                                                                                                               |
| ● FAIL-Temp    | Temperature critically high.                                                                                                                                                                                                |
| ● FAIL-DC_OUT  | DC OUTPUT overload. See chapter 3.2.3.                                                                                                                                                                                      |
| ● Unlocked     | PLL unlocked. Check flat cables to transceiver board. Try switching to a different frequency. See chapter 4.5.                                                                                                              |
| ● Read disable | Read Disable LED. On while reading disabled. See chapter 3.4.2.                                                                                                                                                             |

5.2 TAB BOARD INDICATIONS

The LEDs on the TAB board indicate its status. These LEDs are very useful when troubleshooting the Ultimate-mode features. Below the function of each LED is described.

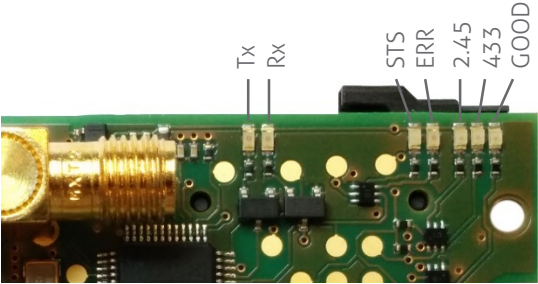


Figure 22: LED indications TAB board

| Led    | Description                                                                                                                                                                                                                                                                  |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ● STS  | TAB board status LED<br>Fast blinking: Boot loader active. Indicated after restart.<br>Regular blinking: Heartbeat (0.5s on / 0.5s off)<br>Special blink 1: Programmer firmware (0.1s on / 0.9s off).<br>Special blink 9: TAB stopped. Hardware fault, (0.9s on / 0.1s off). |
| ● ERR  | Error LED.<br>SAM error – not present, not locked, not supported, etc.<br>TAB error – authentication failed.                                                                                                                                                                 |
| ● 2.45 | 2.45GHz microwave tag data received.<br>Does not indicate when TAB bypassed. See chapter 4.3.                                                                                                                                                                                |
| ● 433  | 433MHz tag data received.<br>Only indicated when using Ultimate tags.                                                                                                                                                                                                        |
| ● GOOD | Ultimate tag successfully authenticated.<br>Tag data transmitted to TRANSIT Ultimate main board.<br>TRANSIT should be able to identify now. Check ID-LED main board.                                                                                                         |
| ● Tx   | Transmit serial data (USB, I/F-board). See chapter 4.2.                                                                                                                                                                                                                      |
| ● Rx   | Receive serial data (USB, I/F-board).                                                                                                                                                                                                                                        |

## Technical specification

(\*) not evaluated by UL

## B FREQUENCY CHANNELS

Transceiver board frequency selection table:

 
| Frequency (GHz) | S1  | S2  | S3  | S4  | S5  | Wi-Fi | ETSI | FCC |
|-----------------|-----|-----|-----|-----|-----|-------|------|-----|
| 2.4384          | ON  | ON  | ON  | ON  | ON  |       | -    | ✓   |
| 2.4390          | OFF | ON  | ON  | ON  | ON  |       | -    | ✓   |
| 2.4396          | ON  | OFF | ON  | ON  | ON  |       | -    | ✓   |
| 2.4402          | OFF | OFF | ON  | ON  | ON  |       | -    | ✓   |
| 2.4408          | ON  | ON  | OFF | ON  | ON  |       | -    | ✓   |
| 2.4414          | OFF | ON  | OFF | ON  | ON  |       | -    | ✓   |
| 2.4420          | ON  | OFF | OFF | ON  | ON  | CH7   | -    | ✓   |
| 2.4426          | OFF | OFF | OFF | ON  | ON  |       | -    | ✓   |
| 2.4432          | ON  | ON  | ON  | OFF | ON  |       | -    | ✓   |
| 2.4438          | OFF | ON  | ON  | OFF | ON  |       | -    | ✓   |
| 2.4444          | ON  | OFF | ON  | OFF | ON  |       | -    | ✓   |
| 2.4450          | OFF | OFF | ON  | OFF | ON  |       | -    | ✓   |
| 2.4456          | ON  | ON  | OFF | OFF | ON  |       | -    | ✓   |
| 2.4462          | OFF | ON  | OFF | OFF | ON  |       | ✓    | ✓   |
| 2.4468          | ON  | OFF | OFF | OFF | ON  |       | ✓    | ✓   |
| 2.4474          | OFF | OFF | OFF | OFF | ON  | CH8   | ✓    | ✓   |
| 2.4480          | ON  | ON  | ON  | ON  | OFF |       | ✓    | ✓   |
| 2.4486          | OFF | ON  | ON  | ON  | OFF |       | ✓    | ✓   |
| 2.4492          | ON  | OFF | ON  | ON  | OFF |       | ✓    | ✓   |
| 2.4498          | OFF | OFF | ON  | ON  | OFF |       | ✓    | ✓   |
| 2.4504          | ON  | ON  | OFF | ON  | OFF |       | ✓    | ✓   |
| 2.4510          | OFF | ON  | OFF | ON  | OFF |       | ✓    | ✓   |
| 2.4516          | ON  | OFF | OFF | ON  | OFF |       | ✓    | ✓   |
| 2.4522          | OFF | OFF | OFF | ON  | OFF | CH9   | ✓    | ✓   |
| 2.4528          | ON  | ON  | ON  | OFF | OFF |       | ✓    | ✓   |
| 2.4534          | OFF | ON  | ON  | OFF | OFF |       | ✓    | ✓   |
| 2.4540          | ON  | OFF | ON  | OFF | OFF |       | -    | ✓   |
| 2.4546          | OFF | OFF | ON  | OFF | OFF |       | -    | ✓   |
| 2.4552          | ON  | ON  | OFF | OFF | OFF |       | -    | ✓   |
| 2.4558          | OFF | ON  | OFF | OFF | OFF |       | -    | ✓   |
| 2.4564          | ON  | OFF | OFF | OFF | OFF |       | -    | ✓   |
| 2.4570          | OFF | OFF | OFF | OFF | OFF | CH10  | -    | ✓   |

The selected frequency has to comply with local radio regulations.

ETSI frequency range from 2.446 to 2.454 GHz.

FCC frequency range from 2.435 to 2.465 GHz.

C NEDAP PART NUMBERS

| Product                                                                             | Part number | Description                     |
|-------------------------------------------------------------------------------------|-------------|---------------------------------|
|    | 9215689     | TRANSIT Ultimate                |
|    | 9216537     | Security Key Pack (SAM)         |
|    | 5626595     | Pole Mounting Kit               |
|    | 7819102     | HID Interface Board (HIB)       |
|    | 7817940     | TCP/IP Interface Board (*)      |
|   | 7817347     | RS422/RS485 Interface Board     |
|  | 7806434     | RS232 Interface Board           |
|  | 7817134     | Profibus DP Interface Board (*) |
|  | 9564314     | Window Tag Ultimate             |
|  | 9982809     | Smartcard Booster Ultimate      |
|  | 9982817     | LEGIC Booster Ultimate (*)      |

(\*) not evaluated by UL

## D FCC / IC STATEMENT

FCC ID: CGDTRANSITULTI

IC: 1444A-TRANSITULTI

### Compliance statements (part15.19)

This device complies with part 15 of the FCC Rules and to RSS210 of Industry Canada. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil se conforme aux normes CNR210 exemptés de licence du Industry Canada.

L'opération est soumise aux deux conditions suivantes:

- (1) cet appareil ne doit causer aucune interférence, et
- (2) cet appareil doit accepter n'importe quelle interférence, y inclus interférence qui peut causer une opération non pas voulu de cet appareil.

### Warning (part15.21)

Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment. This in particular is applicable for the antenna which can be delivered with the TRANSIT ULTIMATE System.

### RF Exposure (OET Bulletin 65)

To comply with FCC RF exposure requirements for mobile transmitting devices, this transmitter should only be used or installed at locations where there is at least 20cm separation distance between the antenna and all persons.

### Information to the User (Part 15.106(b))

Note: This equipment has been tested and found to comply with the limits for a class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequent energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determine by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## E    **DISCLAIMER**

This information is furnished for guidance, and with no guarantee as to its accuracy or completeness; its publication conveys no license under any patent or other right, nor does the publisher assume liability for any consequence of its use; specifications and availability of goods mentioned in it are subject to change without notice; it is not to be reproduced in any way, in whole or in part, without the written consent of the publisher.

F DOCUMENT REVISION

| Version | Date       | Comment                                 |
|---------|------------|-----------------------------------------|
| 4.6     | 2015-12-17 | HR: update for UL certification         |
| 4.5     | 2015-08-25 | HR: update for compliance certification |
| 4.4     | 2015-08-25 | HR: mounting sets naming unambiguous    |
| 4.3     | 2015-07-22 | HR: updated dip-switch                  |
| 4.2     | 2015-06-09 | HR: updated technical specifications    |
| 4.1     | 2015-06-01 | HR: updated frequency channel table     |
| 4.0     | 2015-04-10 | HR: Initial version                     |