

				CODE	EVENT	DATA TYPE	ADDRESS NUMBER										
				Zone CATEGORY	OTHER			SMOKE	FIRE	GAS	WATER	PANIC	HOLDUP	TECHNICAL	DOOR		
ZONE EVENTS																	
Zone alarm				BA	Burglary Alarm	Partition and Id.Partition	Id. Zones	FA	FA	GA	WA	PA	HA	ZA	DO		
Zone restoral				BR	Burglary Restoral	Partition and Id.Partition	Id. Zones	FR	FR	GR	WR	PA	HR	ZR	DR		
Zone tamper				TA	Tamper Alarm	Partition and Id.Partition	Id. Zones	FT	FT	GT	WT	PT	HT	TA	TA		
Zone tamper restoral				TR	Tamper Restoral	Partition and Id.Partition	Id. Zones	FJ	FJ	GJ	WJ	PJ	HJ	TR	TR		
Zone bypass				BB	Burglary bypass	Partition and Id.Partition	Id. Zones	FB	FB	GB	WB	PB	HB	ZB	BB		
Zone unbypass				BU	Burglary Unbypass	Partition and Id.Partition	Id. Zones	FU	FU	GU	WU	PU	HU	ZU	BU		
Zone masking				BT	Burglary Trouble	Partition and Id.Partition	Id. Zones	BT	BT	BT	BT	BT	BT	BT	BT		
Zone masking restoral				BR	Burglary Restoral	Partition and Id.Partition	Id. Zones	BJ	BJ	BJ	BJ	BJ	BJ	BJ	BJ		
Zone real time alarm				UX	Undefined	Partition and Id.Partition	Id. Zones	FA	FA	GA	WA	PA	HA	ZA	DO		
Zone real time restoral				UX	Undefined	Partition and Id.Partition	Id. Zones	FR	FR	GR	WR	PR	HR	ZR	DR		
Zone pre alarm				BG	Unverified event burglary	Partition and Id.Partition	Id. Zones	BG	BG	BG	BG	BG	BG	BG	BG		
PARTITION EVENTS																	
Partition alarm				BA	Burglary Alarm	Partition and Id.Partition	NULL										
Partition tamper				TA	Tamper Alarm	Partition and Id.Partition	NULL										
Partition armed				CL	Closing Report	Partition and Id.Partition	NULL										
Partition disarmed				OP	Opening Report	Partition and Id.Partition	NULL										
Partition exit time restoral				UX	Undefined	Partition and Id.Partition	NULL										
Partition negligency				CI	Undefined	Partition and Id.Partition	NULL										
Arming cancelled				CI	Fail to Close	Partition and Id.Partition	NULL										
Doorbel				0	Undefined	Partition and Id.Partition	NULL										
End Doorbel				0	Undefined	Partition and Id.Partition	NULL										
Patrouille				0	Undefined	Partition and Id.Partition	NULL										
End Patrouille				0	Undefined	Partition and Id.Partition	NULL										
Entry time				0	Undefined	Partition and Id.Partition	NULL										
Entry time end				0	Undefined	Partition and Id.Partition	NULL										
Exit time				0	Undefined	Partition and Id.Partition	NULL										
Exit time end				0	Undefined	Partition and Id.Partition	NULL										
OUTPUT EVENTS																	
Output Activated				0	Undefined	NULL	Id.output										
Output Deactivated				0	Undefined	NULL	Id.output										
Load Connection				0	Undefined	NULL	Id.output										
Load Disconnection				0	Undefined	NULL	Id.output										
PERIPHERAL EVENTS																	
Peripheral Tamper				ES	Exp. Device Tamper	NULL	Id. Peripheral										
Peripheral tamper restored				EJ	Exp. Tamper Restore	NULL	Id. Peripheral										
Wireless peripheral tamper				ES	Exp. Device Tamper	NULL	Id. Peripheral										
Wireless peripheral tamper restoral				EJ	Exp. Tamper Restore	NULL	Id. Peripheral										
Peripheral missing				EM	Exp. Device Missing	NULL	Id. Peripheral										
Peripheral missing restoral				EN	Exp. Missing Restore	NULL	Id. Peripheral										
Wireless peripheral missing				EM	Exp. Device Missing	NULL	Id. Peripheral										
Wireless peripheral missing restoral				EN	Exp. Missing Restore	NULL	Id. Peripheral										
IP Peripheral Tamper				ES	Exp. Device Tamper	NULL	Id. Peripheral										
IP Peripheral Tamper restoral				EJ	Exp. Tamper Restore	NULL	Id. Peripheral										
IP Peripheral missing				EM	Exp. Device Missing	NULL	Id. Peripheral										
IP Peripheral missing restoral				EN	Exp. Missing Restore	NULL	Id. Peripheral										

KEYPAD EVENTS					
Key 0 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 1 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 2 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 3 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 4 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 5 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 6 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 7 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 8 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
Key 9 on keypad	PA	Panic Alarm	NULL	Id. Peripheral UI	
PROXIMITY READER EVENTS					
Green led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Red led on reader	UX	Undefined	NULL	Id. Peripheral UI	
White led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Blue led on reader	UX	Undefined	NULL	Id. Peripheral UI	
Yellow led on reader	UX	Undefined	NULL	Id. Peripheral UI	
COMMUNICATION EVENTS					
Communication failure to user	YC	Communications Fail	NULL	Id.Contact List	
Incoming call*	UX	Undefined	NULL	NULL	
C-ID communication done	UX	Undefined	NULL	NULL	
C-ID communication failure	YC	Communications Fail	NULL	Id. CID Receiver	
SIA communication done	UX	Undefined	NULL	NULL	
SIA communication failure	YC	Communications Fail	NULL	Id. SIA Receiver	
POWER EVENTS					
Main power loss	AT	AC Trouble	NULL	Id. Peripheral	
Main power restoral	AR	AC Restoral	NULL	Id. Peripheral	
Low battery	YT	System Battery Trouble	NULL	Id. Peripheral	
Low battery restoral	YR	System Battery Restored	NULL	Id. Peripheral	
Battery fault	YT	System Battery Trouble	NULL	Id. Peripheral	
Low power output	YP	Powe Supply Trouble	NULL	Id. Peripheral	
Low power output restoral	YQ	Power Supply Restored	NULL	Id. Peripheral	
Battery charger fault	YP	Powe Supply Trouble	NULL	Id. Peripheral	
Battery charger restoral	YQ	Power Supply Restored	NULL	Id. Peripheral	
Warning fuse	YI	Overcurrent Trouble	NULL	Id. Peripheral	
Warning fuse restoral	YJ	Overcurrent Restore	NULL	Id. Peripheral	
CRONOTERMOSTAT EVENTS					
Cronotermostat off*	UX	Undefined	NULL	Id. Chronothermostat	
Heater on*	ZH	Freeze Alarm Restore	NULL	Id. Chronothermostat	
Cooler on*	ZA	Freeze Alarm	NULL	Id. Chronothermostat	
REMOTE CONTROL EVENTS					
Disarm key	PA	Panic Alarm	NULL	Id. Remote Control	
Partial arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Full arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on disarm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on partial arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on total arm key	PA	Panic Alarm	NULL	Id. Remote Control	
Long press on info key	PA	Panic Alarm	NULL	Id. Remote Control	
CODE/TAG EVENTS					
Recognized user code	JP	User On Premises	NULL	Id. Account	
Recognized user key	JP	User On Premises	NULL	Id. Account	
MOTHER BOARD EVENTS					
Panel tamper	137	CID_AL_ZONE_TAMPER	NULL	NULL	
Panel tamper restoral	137	CID_AL_ZONE_TAMPER	NULL	NULL	
Configuration start	LB	Panel programming changed	NULL	NULL	
Configuration end	LX	Panel programming changed	NULL	NULL	
Periodic test	RP	Periodic test report	NULL	NULL	
Wrong code	DD	Access denied	NULL	Id. Account	

[illegible]