

Calculation software ASD PipeFlow

V: 2.8.0

Product change request: ----/--

Software identification:

File name	Software version		Released	Dependency ASD FW
	New	Basis		
ASD PipeFlow 2.8.0 Setup Securiton.exe	2.8.0	2.7.0	19.12.2022	None
ASD PipeFlow 2.8.0 Setup Hekatron.exe				
ASD PipeFlow 2.8.0 Setup Schrack.exe				

Changes V: 2.8.0:

CR	Typ	Description
--	N	<ul style="list-style-type: none">• Various sets and accessories added• Cleanup of the material list "Additional material"• Various text corrections• Various optimisations and bug fixes
	N/K	
	K	
	K/F	

Obligation to replace:

For all new ASD applications, only calculation software 2.8.0 is to be used.

Compatibility:

Projects created with the versions 2.7.0 and 2.8.0 cannot be used with previous versions.



Installation notice

- Minimum system requirements: Windows 7 SP1; 200 MB free hard disk space; 1 GB RAM
CPU = 2 GHz (single) / 1.5 GHz (dual); GPU = DirectX 9 capable
- Screen resolution: at least 1280 x 720 pixel
- ASD PipeFlow calculation software can be run with Windows 7 SP1 (32 & 64 bit), Windows 8.1 (64 bit) and Windows 10 (64 bit, at least V1809).
- The corresponding .NET language pack may have to be installed to display the texts correctly in the program.
- Program to display PDF reports (e.g. Adobe Reader). The "Arial Unicode MS" or "Arial Unicode MS Standard" font must be present for Asian symbols to be printed (e.g. installed with MS Office).
- To represent Asian texts correctly in the report, the "Arial unicode ms" font must be selected in "[Extras > Options / Settings > Language/Environment \(application\)](#)".
- Internet Explorer 11 or Microsoft Edge (Online Help).

If a previous version of ASD PipeFlow is installed on the PC, it must be uninstalled prior to the new installation. This is performed via the Control Panel of the PC via "Remove program".

Notes for the IT administrator:

By entering the following command in the command line, the software can be silently installed or uninstalled:

- Installation: **"Path\Setup.exe" -q**
- Deinstallation: **"Path\Setup.exe" -uninstall -q**

Remarks:

- The entry between the quotation marks corresponds to the path where the setup file is stored and the file name specified on page 1 (software identification).
- The installation path can be specified with **InstallFolder="C:\AnyPath"** (attention: case sensitive). Without this specification the default path is used.