



Configuration of PP500:

- PP500 will be delivered with BC-Link protocol
- A3: Preconfigured interface BE (Wiegand 48bit)
 - Go to programming mode: Programming mode is enabled when powering up the reader with the 'B' button pressed for 2 seconds. This is indicated by red and green LEDs blinking
 - Press „A3" ▪ Press 'B' to exit programming mode, when red and green LEDs are flashing Together

Configuration in SPC:

- With first batch of card or tag the reader is automatically configured with default settings

PP500 card reader

PP500-Cotag Order No.: S54501-F1-A2

PP500-EM Order No.: S54501-F1-A1

PP500 card reader reads Cotag or EM cards, in dependance on the card reader (Cotag or EM):

- Cotag cards: **IB928** active Cotag clamshell card (Ord.-No.: S24246-D5203-A1), **IB911** active Cotag key-ring tag (Ord.-No.: S24246-D5204-A1), **IB968** passive Cotag clamshell card (Ord.-No.: S24246-D5201-A1), **IB958M** passive Cotag card with magnetic stripe (Ord.-No.: S24246-D5205-A1), **IB961** passive Cotag key-ring tag (Ord.-No.: S24246-D5202-A1)
- EM cards: **IB41-EM** pre-printed EM laminated card with print (Ord.-No.: S24246-D4904-A1), **IB42-EM** blank printable EM laminated card without print (Ord.-No.: S24246-D4901-A1), **IB44-EM** key-ring tag (Ord.-No.: S24246-D4902-A1), **IB45-EM** EM adhesive tag (Ord.-No.: S24246-D4903-A1)