


### INSTALLATION INSTRUCTIONS:

1. Center the wire guard over existing motion detector.
2. Mark and drill (4) mounting holes (see pictorial for size).  
Lag Bolts - If lag shields and lag bolts are used, make sure rawl plug is flush with surface. Position guard, insert lag bolt and tighten. Length of bolt should be selected to assure full thread engagement in rawl plug.
3. For installations that require tamperproof fasteners, order KIT-81 stainless steel screws and part no. 19038 bit.

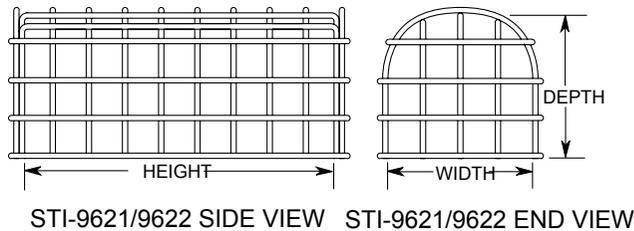

Model	Height	Width	Depth
STI-9621	178mm (7.0in.)	146mm (5.75in.)	114mm (4.5in.)
STI-9622	222mm (8.75in.)	102mm (4.0in.)	95mm (3.75in.)

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at [www.sti-usa.com/wc14](http://www.sti-usa.com/wc14).

## INSTALLATION OF STI-9621 & STI-9622 MOTION DETECTOR DAMAGE STOPPER

All specifications and information shown were current as of publication and are subject to change without notice.